

Height 225cm

## CONTENTS

FLYSHEET	Guy lines attached
POLE BAG	3 steel poles (3 sections for each pole, 1 set is fully adjustable)
PEG BAG	Steel pegs
REPAIR LIST	Fabric patches, seam sealant, spare toggle & shock cord



## ERECTION INSTRUCTIONS

- 1: Remove contents from valise and identify each item.
- 2: Assemble poles, these come in three sections per 1 pole, 2 straight sides and 1 arch over the top. Where these poles fit together, they are in the shape of a trapezium where 1 side is longer than the other 3. Make sure you fit these sections together the correct way.
- 3: Place flysheet on ground and thread poles carefully through the pole sleeves. The adjustable pole should be threaded through the sleeve furthest from the logos.
- 4: Tension the flysheet in place with the adjustable clips that reach down to the end of the pole hook over spike and adjust the webbing strap.
- 5: Place canopy in position over the front entrance to the tent. The gusset at the back should be hooked over the front pole of the tent and the adjuster bracket on the back pole can be loosened or tightened to get the canopy at the correct height.
- 6: Guy lines are fitted and if used correctly will provide increased stability in adverse conditions, we therefore advise that the tent be guyed down as well as pegged. Always follow the line of the pole that the guy rope is attached to and peg into the ground in that line.
- 7: After use ensure tents are clean and dry before packing away. Brushing or gently washing with luke warm water will remove any dirt or stains. Never use detergents as these can affect the waterproofing of the tent. Store in a cool dry place.

## FIRE RETARDANT

This Aztec tent is fire retardant proofed but, does not mean it is safe to cook or use naked flames within your tent.



# CANOPY