

CONTENT

FLYSHEET	Guy lines attached
INNER TENT	1 complete inner
POLE BAG	5 x alloy poles
PEG BAG	Alloy pegs
REPAIR KIT	Pole repair sleeve, fabric patches, seam sealant, spare toggle and shock cord

Height 140cm



ERECTION INSTRUCTIONS

- 1: Remove contents from valise and identify each item.
- 2: Assemble poles.
- 3: Lay flysheet on ground and thread colour-coded poles carefully through the corresponding colour-coded sleeves.
- 4: Once threaded, place poles onto pins attached to the base of the tent and peg out. Always start at one point and work round. Ensure all door zips are closed before pegging out.
- 5: Guy lines are fitted and if used correctly will provide increased stability in adverse conditions, we therefore advise that the tent be guyed down as well as pegged. Always follow the line of the pole that the guy rope is attached to and peg into the ground in that line.
- 6: Fit inner into tent by clipping the inner tent corners into flysheet. Raise the inner by fitting toggles through the corresponding eyelets. This tent can be dismantled and re-erected with inner tent connected.
- 7: After use ensure tents (inner and outer) are clean and dry before packing away. Brushing or gently washing with luke warm water will remove any dirt or stains. Never use detergents as these can affect the waterproofing of the tent. Store in a cool dry place.

ALLOY POLES

If alloy poles are overtensioned they **will** split. A spare metal tube for an emergency repair is supplied in the repair kit.

CONDENSATION

This is caused by moisture in the atmosphere, respiration and perspiration by the occupants. The moisture in the air comes into contact with the colder fabric and framework and condenses into water droplets. This is not to be confused with the tent leaking. On the contrary the problem is caused by water trying to get out of the tent rather than trying to leak in! Taking the following precautions can reduce condensation.

- 1: Adequate Ventilation
- 2: Do not cook inside the tent
- 3: Where possible avoid storing wet/damp clothing or equipment inside the tent.
- 4: Use a groundsheet in the living area of the tent; this reduces the amount of moisture rising out the ground.
- 5: Always take the opportunity to air sleeping bags when the sun is out, as sleeping bags tend to store moisture from the user.

FIRE RETARDANT

This Aztec tent is fire retardant proofed but, does not mean it is safe to cook or use naked flames within your tent.



DURO PLUS